



www.shopprider.com.au

mobility

ULTRALIGHT SCOOTER

OWNERS MANUAL MODEL UL7-4



Mounting

Make sure your Ultra Light is on level ground – turn the battery pack at the rear of the scooter to the ON position. Battery charge meter will be in the green.

Seat yourself in the Scooter.

Turn the speed dial to slow. (Turn the dial to the left).

Turn the on/off switch to the ON position (the orange light will glow indicating it is ON).


Dismounting

Ensure that your Ultra Light has fully stopped.

Turn the on/off switch to the OFF position (the orange light will not glow).

You can now dismount from the seat.

Turn the battery pack at the rear of the scooter to the OFF position.

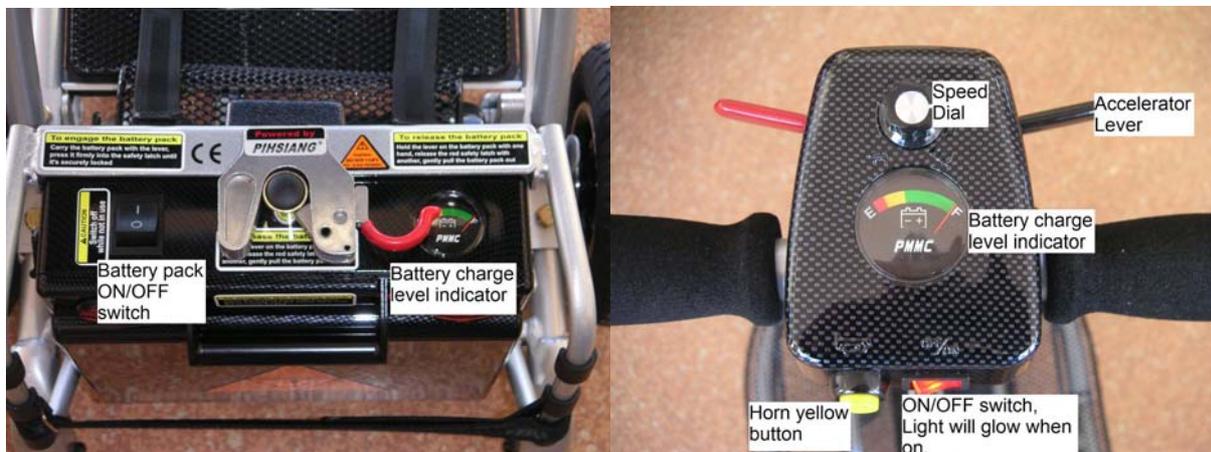

Basic Driving

Make sure you have completed the details described under “mounting”.

For the standard unit pull on the accelerator lever with your RIGHT hand to start moving forward.

To STOP gently release the accelerator lever.

Practise these two basic functions until you are proficient in their use.

Steering the Ultra Light is easy and logical. Just be sure to remember to give a clearance when turning so that the rear wheels clear any obstacles.

When turning always turn your Ultra Light to a LOW speed.

If it is a tight turn (entering a doorway or going around a blind corner) STOP your ultralight. Turn your steering column in the direction you wish to proceed whilst still in the stationary position. Then apply the power gently to move forward. The Ultra Light will move gently and with complete stability.

REVERSING requires your attention

Always turn your Speed dial to SLOW before reversing.

Pull the accelerator lever with your left hand.

Remember, when you reverse steer you turn in the OPPOSITE direction to the way you want to go. Always take your time.

The Ultra Light scooters are not designed for use in loose gravel, sand or soft grass. Your scooter is also not designed to be used in wet weather or rain.

Ramps

The stability of your scooter is governed by several factors such as the seating position of the occupant, the angle of the slope, your height and weight. When approaching an incline, do so directly, avoid driving up on an angle. Where ever possible avoid making turns on any incline or decline. When going down a slope set the speed setting to SLOW, this will ensure there is a safe controlled decent. When the thumb levers are released the scooter will slow to a stop.

Do not turn off the control key whilst the unit is in motion.

Please follow all the guidelines and your scooter will perform admirably over many surfaces.

Doors

Always ensure your speed is set at the SLOWEST setting.

Think in terms of using the power of the Ultra Light to do the work for you. For doors that open outward, hold the door knob with your right hand and reverse the Ultra Light as described earlier. Where the door opens inwards hold the door knob with your left hand and pull your accelerator lever with your RIGHT hand.

Transporting Your Scooter

Always ensure your scooter is turned OFF both on the battery pack and on the steering column.


Remove your basket by pulling it up gently.


Remove your battery pack by flicking the release lever (as indicated figure #1) and then using the carry handle (as indicated figure #2) to lift it away from the rear of the scooter.

Fold the seat by pulling up on lever (as indicated figure #3) and pull the seat directly up and then fold it forward onto the body of the scooter (as indicated figure #4). Remove the seat from the scooter by lifting the red lever (as indicated figure #5).

Fold the front tiller down onto the scooter after pushing in the red tiller lever in (as indicated figure #6) Wrap the straps around the handle bars (as indicated figure #7). The scooter is now ready to be placed in the car.

Once the Scooter has been placed in the car remove straps from the handlebars, lift the tiller marginally. Place the seat back in position and fold the tiller back down over the seat. The basket and battery pack can be placed loosely in the car.

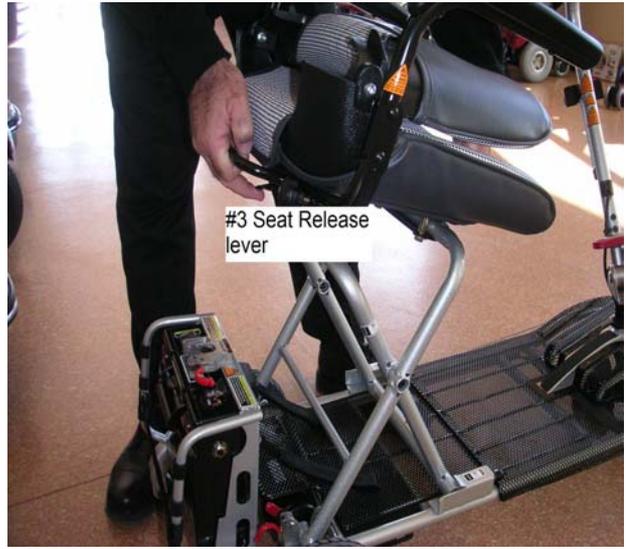

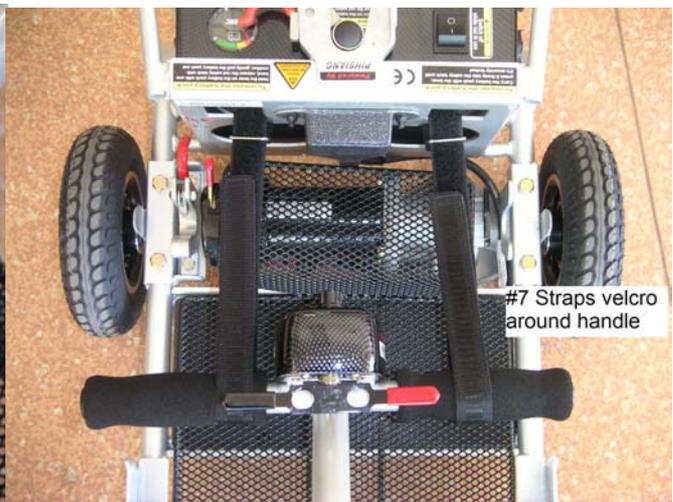

CHARGING

The battery pack can be charged as an independent unit. It does not have to be connected to the scooter (See Diagram below)

Ensure the power button on the battery pack is turned OFF. The battery charge level indicator will be in the RED section when the battery is very low.

Place the MALE socket of the battery charger into the female socket on the battery pack.

Plug your charger into the wall and turn the power on. The charger light will glow RED indicating the batteries are NOT fully charged. When the batteries have reached their capacity the charger light will glow GREEN.

